




A product and trademark of
BEDFIN LLC
www.BedFin.com

USER/INSTALLATION GUIDE

BFX Series Product

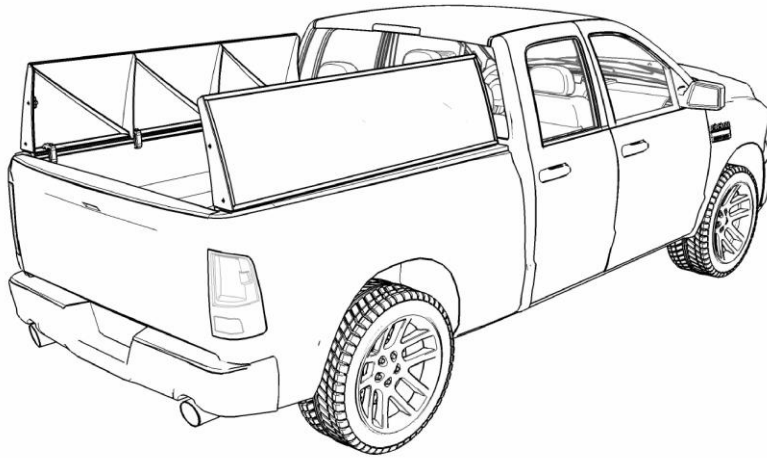


This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

CONTENTS


Parts List	PAGE 3
Thank You / Overview	PAGE 4
Dos & Don'ts	PAGE 5
Typical Installation Base-unit	PAGE 6
Wrench & Manual Storage	PAGE 12
Operations Guide	PAGE 13
Extension Installation	PAGE 18
Uninstallation	PAGE 21
Warranty	PAGE 22

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF BEDFIN LLC AND ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE EXPRESS WRITTEN PERMISSION OF BEDFIN IS PROHIBITED

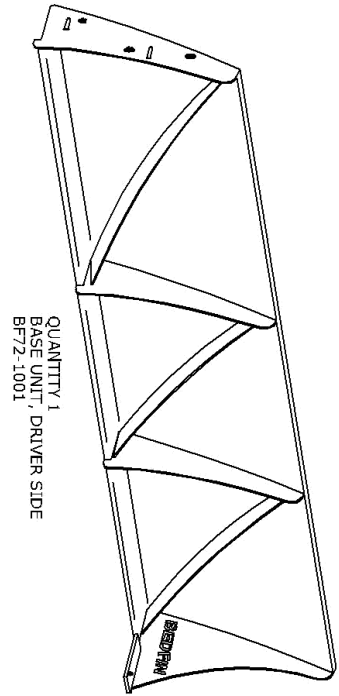


QUANTITY 1
BASE UNIT, DRIVER SIDE
BF72-1001

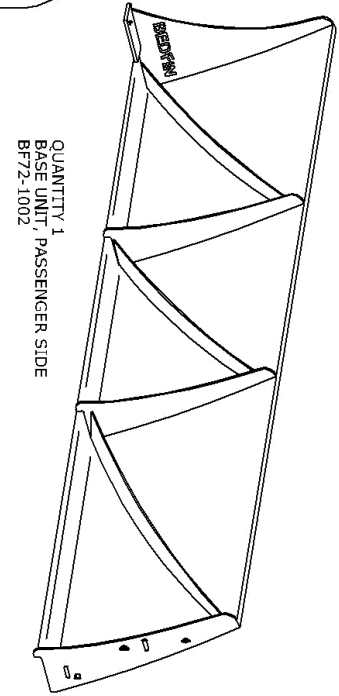


QUANTITY 1
BASE UNIT, PASSENGER SIDE
BF72-1002

 

QUANTITY 1
MESSAGE BOARD END GATE, DRIVER SIDE
BF00-1003

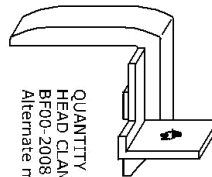


QUANTITY 1
HEAD CLAMP, TOP DRIVER
BF00-2008
Alternate may be provided

 


QUANTITY 1
HEAD CLAMP, TOP PASSENGER
BF00-2009
Alternate may be provided



QUANTITY 1
MESSAGE BOARD END GATE, PASSENGER SIDE
BF00-1004

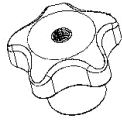

QUANTITY 4
KNOBS
BF00-3017

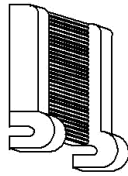


QUANTITY 8
CLAMP PROTECTION
BF00-3045



QUANTITY 6
NUT
BF00-3020




QUANTITY 4
WASHER, 1/4"
BF00-3018

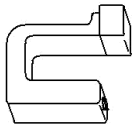


QUANTITY 2
HEAD CLAMP, BOTTOM
BF00-2007
Alternate may be provided

 
QUANTITY 10
BOLT, 3/8-16
BF00-3010



QUANTITY 4
BOLT, 1/4-20
BF00-3019

 

QUANTITY 2
INSTALLATION/EMERGENCY WRENCH
BF00-3021

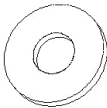

QUANTITY 16
WASHER, 3/8"
BF00-3011

DESC: BFX72 PARTS LIST (NOT TO SCALE)

BEDFIN
SIGNAGE WITHOUT SACRIFICE

SHEET 1 OF 1

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Thank you for purchasing a Bedfin signage system

Bedfin LLC created Bedfin signage to support you in your mission and wants you to get the most from its use. The following information will help you safely achieve the most from your Bedfin unit. Read this entire guide and contact Bedfin LLC with questions, so you fully understand the product prior to use. If you transfer ownership or lend the Bedfin unit to another user, make sure the User Guide and Emergency-Wrenches are made available to the user. All operators of vehicles with Bedfin signage installed must understand the dangers present when operating during certain conditions or with an improper installation.

Closely follow the instructions and suggestions in this guide. Installing and operating Bedfin in a manner inconsistent with this guide can be dangerous and may result in damage to property and injury or death to people. Proper maintenance as described in this guide will ensure the Bedfin system's long term performance.

No modifications to your vehicle should be made to accommodate the Bedfin signage system as it has been designed for universality among different vehicle makes. If for any reason the unit will not install or operate as described in this guide, contact Bedfin LLC for assistance. Bedfin signage installation requires the use of hand tools only. Power assisted tools should not be used, as they may damage the hardware and could lead to product failure. If at any time during installation any component of the system shows signs of defect, wear, or is problematic, discontinue the installation, remove all installed components, and contact Bedfin LLC for support. Do not attempt to repair or modify your Bedfin signage system.

Bedfin signage is not designed to restrain loads. Do not tie off, hook, or clamp anything to your unit which is not provided by Bedfin as an accessory.

**Thank you again for choosing Bedfin signage for your mission. Whether you are building a business, fundraising, promoting your organization, or campaigning, Bedfin LLC wishes you all the best.
Call or email for assistance (253)882-4112 / keith@bedfin.com .**

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Don'ts

Violation of the following may void any warranty made by the manufacturer and may limit or eliminate the manufacturer's liability from claims of damage, injury, or death as a result of operating a vehicle with Bedfin unit installed.

- Do not** install or use Bedfin units if rust is present on truck areas which are structurally significant to the Bedfin unit function.
- Do not** operate your vehicle with Bedfin unit installed during high winds.
- Do not** use automated vehicle washes with Bedfin unit installed.
- Do not** drive at speeds in excess of 70 miles per hour with Bedfin signage installed.
- Do not** drive on bumpy surfaces without reducing speed to a level which protects unit from excessive vibration.
- Do not** over-tighten fastening hardware during installation.
- Do not** strap, tie, or affix any device to Bedfin unit which is not provided by the manufacturer as an accessory.
- Do not** operate vehicle with Bedfin unit improperly and/or partially installed.
- Do not** use any hardware with Bedfin unit which did not come from the manufacturer. Parts are available through Bedfin LLC.
- Do not** attempt to repair damaged Bedfin unit. Contact Bedfin LLC to receive replacement parts or authorized repairs.
- Do not** modify Bedfin unit in any way without express written consent from Bedfin LLC.
- Do not** use Bedfin unit to restrain a load in vehicle. Special tie down points are available through Bedfin LLC as an accessory.
- Do not** use message board sizes or materials other than as recommended by Bedfin LLC in the User's Guide.
- Do not** install Bedfin unit or operate a vehicle with Bedfin unit which has not been designed for use with that vehicle.
- Do not** redistribute Bedfin unit without providing other party with a full set of this documentation and Emergency-wrenches.
- Do not** use solvents to clean Bedfin unit as it may damage the coating.
- Do not** clean Bedfin unit with message board installed unless advised by the message board supplier.
- Do not** display messages in Bedfin unit which are considered offensive, illegal, or may be in conflict with interests of Bedfin LLC.
- Do not** install or operate Bedfin unit on a vehicle which has been involved in a collision and/or may have weakened areas which are structurally significant to the proper function of Bedfin unit.

Do

Failing to do the following may void any warranty made by the Bedfin LLC and limits or eliminates Bedfin LLC's liability from claims of damage, injury, or death as a result of operating a vehicle with Bedfin unit installed.


- Do** read User's Guide, and other documents provided by Bedfin LLC prior to installing and operating a vehicle with Bedfin unit.
- Do** inspect Bedfin unit, vehicle, and hardware for damage or fatigue regularly as described in User's Guide.
- Do** inspect Bedfin unit, vehicle, and hardware for loosening regularly as described in User's Guide.
- Do** store Bedfin unit properly when not used to avoid damage resulting in damage, injury, or death when back in operation.
- Do** report all defects to Bedfin LLC immediately to ensure proper resolution and to guard against possible safety concerns.
- Do** operate your vehicle in a manner consistent with the safe operation guidelines as provided by the manufacturer.
- Do** remove Bedfin unit regularly to clean the unit and vehicle to protect the finish and ensure long term performance.
- Do** carry the proper tools for un-installation of Bedfin unit in case driving conditions become unsafe for proper operation.
- Do** supply future owners of Bedfin unit with all documentation and Emergency-Wrenches as provided by Bedfin LLC and check website for updates.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Typical Installation Guide

Bedfin Model BFX72

(other BFX models require same installation process)

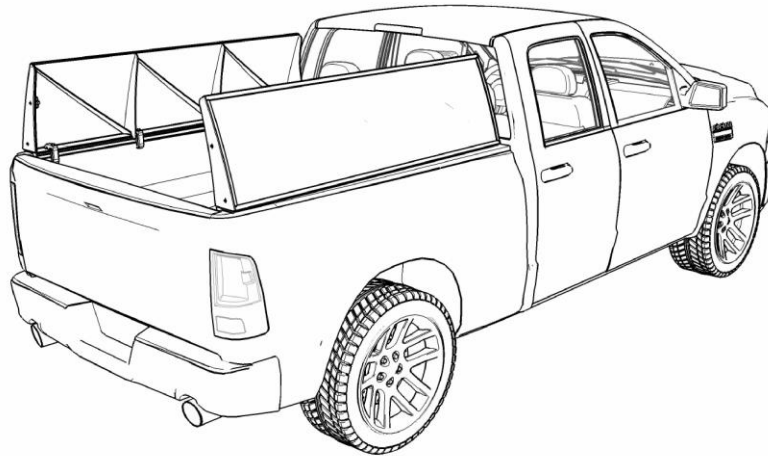

While one person may be able to install a Bedfin unit, to help prevent strain injuries or damage to your vehicle, it is recommended to have the assistance of a second person. In each step, when maneuvering the Bedfin signage or other components around your vehicle, take extra care to avoid bumping against your vehicle; your vehicle finish and or the Bedfin unit could become damaged.

All parts and tools required for installation are included with the purchase of your Bedfin unit. Prior to installation, ensure all necessary components have been included in your package. An illustrated contents list has been provided. The clamps are preassembled with their hardware.

**** USING POWER DRIVEN TOOLS FOR INSTALLATION IS NOT RECOMMENDED AND WILL VOID WARRANTY ****

***** DRILLING IS NOT REQUIRED AND MODIFYING YOUR BEDFIN UNIT IN ANY WAY WILL VOID WARRANTY *****

****** PRIOR TO INSTALLATION OR OPERATION, READ AND FOLLOW ALL MANUALS AND DOCUMENTATION******

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 1

Remove all contents from the packaging and verify the set is complete. Check for damage from transportation or manufacturer defects prior to installation. An illustrated parts list has been provided as part of this guide (Page 3). If any parts are missing or appear damaged, discontinue installation and contact Bedfin LLC for assistance.

Step 2

Remove any factory or aftermarket accessories from your truck which may prevent a solid connection between your Bedfin unit and truck. Common equipment which may prevent Bedfin unit installation are contractor racks, bed covers, truck boxes, canopies, and shell liners. Be sure your accessories can be removed safely and follow the accessory manufacturer's recommendations for removal.

Step 3

Clean your truck bed rails in preparation for mounting your Bedfin unit. Ensure the bed rails and head rail (Fig 7.1) are free of debris which may damage your truck's finish. For additional protection, you may elect to apply protective tape to protect your bed rails (Fig 7.1) available at truck and canopy dealerships and Bedfin LLC.

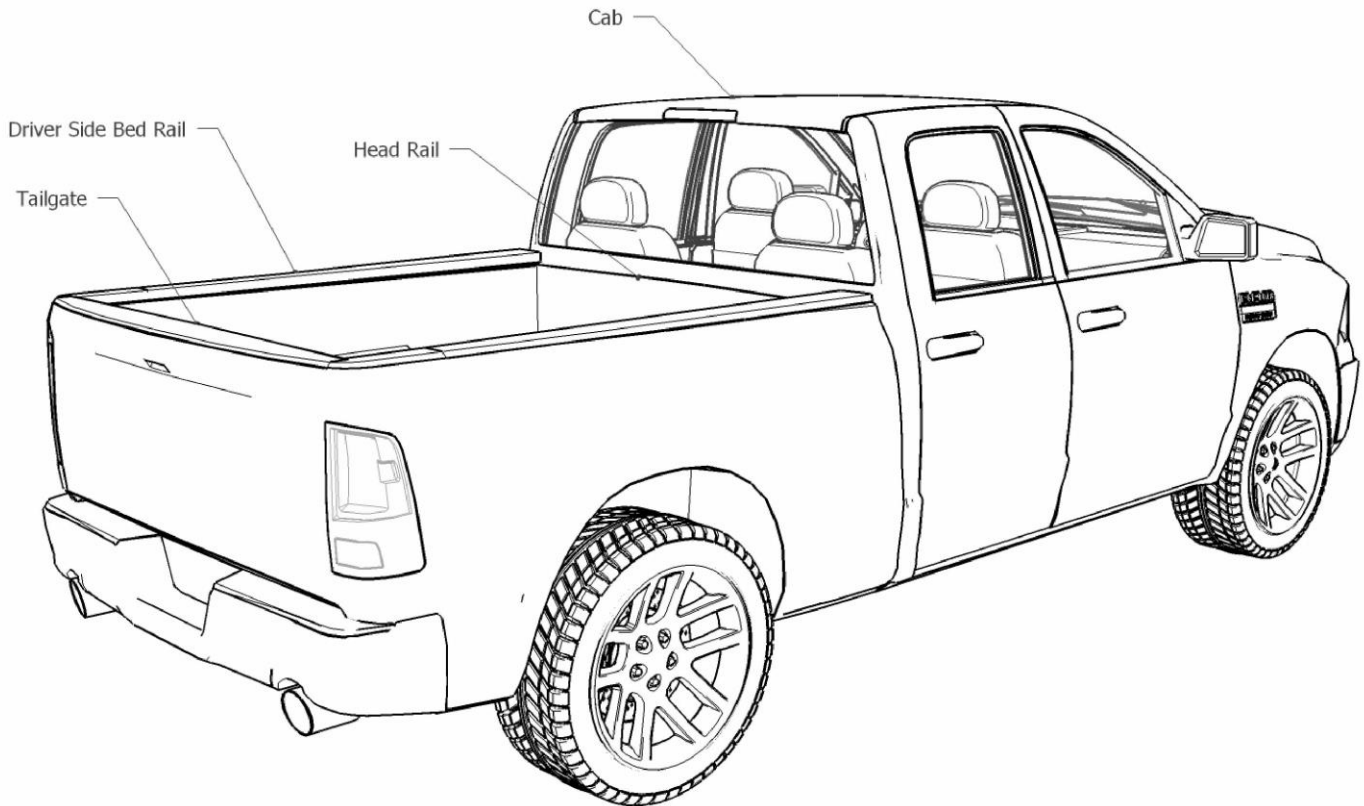


FIGURE 7.1

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 4

Position the driver side head-clamp on the head rail so the exposed tilt-stop-bolt is vertical and pointing upwards (Fig 8.1). Locate the head-clamp so the tilt-stop-bolt is approximately 6" from the inside edge of the driver side bed rail (Fig 8.2). You may place a clamp-protection-pad between the head-clamp and the inside of the truck bed to protect the finish. Gently tighten the head-clamp-bolt enough to lightly hold its position.

----- IMPORTANT NOTES -----

- 1) The driver side and passenger side head-clamps are not interchangeable with one another.**
- 2) The tilt-stop-bolt will be slightly loose at this stage (Fig 8.1).**
- 3) If you experience clearance problems between the clamp hardware and your cab, or the clamp will not seat securely against the clamping surfaces of your bed, you may require a custom set of head-clamps. Contact Bedfin for assistance.**

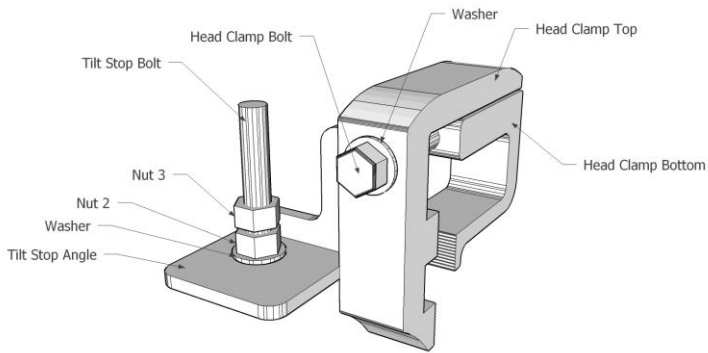


FIGURE 8.1

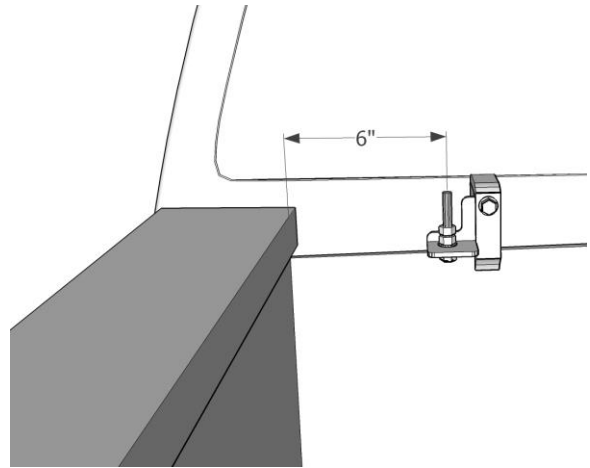


FIGURE 8.2

Step 5

Place a washer on the tilt-stop-bolt so it falls down and rests against the uppermost nut (Fig 8.3).

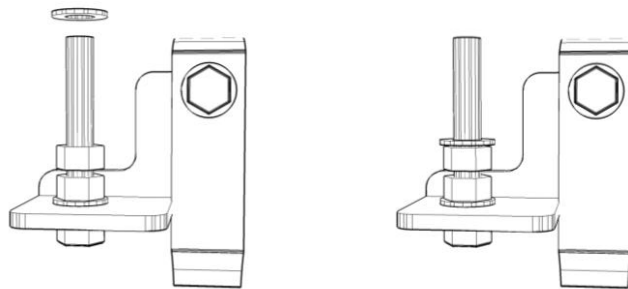


FIGURE 8.3

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 6

Gently place the driver side base-unit on top of the bed rail while your assistant is watching to ensure the slotted hole of the tilt-stop-pad slips over the tilt-stop-bolt on the head-clamp (Fig 9.1). Once set down ensure the base-unit butts up tight against the inside edges of your bed rails. To do this you may need to loosen the head-clamp slightly, allowing the Head-Clamp to reposition with the base-unit.

----- **IMPORTANT NOTE** -----

The driver side and passenger Base-Units are not interchangeable.

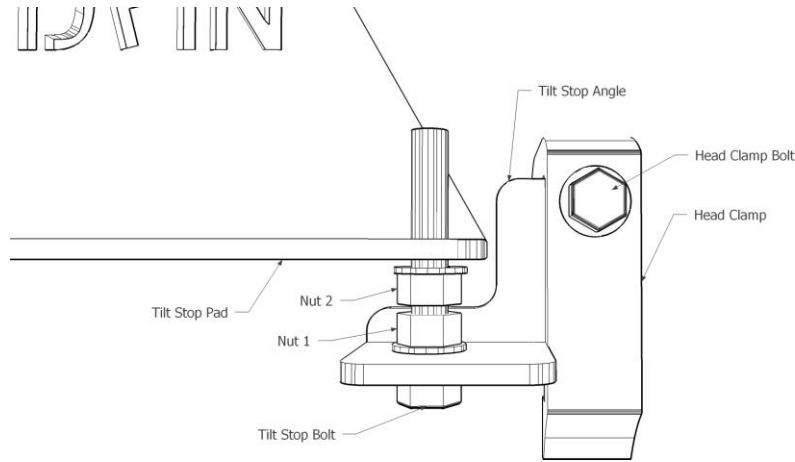


FIGURE 9.1

Step 7

While using an assistant to hold the Base-Unit in place, loosely place three of the standard clamps and the optional clamp-protection-pads (not shown) in position along the length of the base-unit (Fig 9.2). Clamps should be positioned as close to the vertical gussets as possible and oriented so the head of the bolt is at the top (Fig 9.3).

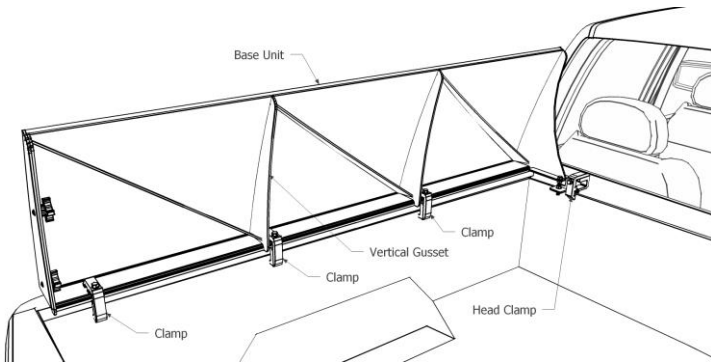


FIGURE 9.2

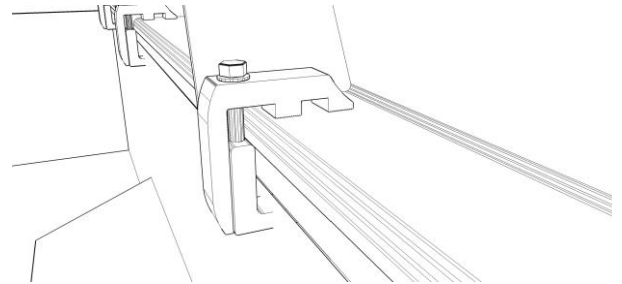


FIGURE 9.3

Step 8

Begin tightening each of the three standard clamps in succession getting progressively tighter with each cycle until fully tightened.

----- **IMPORTANT NOTES** -----

- 1) The top half and bottom half of the clamp will slide closer together as the clamp is tightened. Enough room must be left between the lower half of the clamp and the bed rail flange so the clamp can move unobstructed until fully tightened.*
- 2) Do not over tighten each clamp. Over tightening may strip/weaken the threads of your clamps or cause damage to your truck.*

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 9

Slide the Head-Clamp towards either the driver side or passenger side slightly to ensure the tilt-stop-angle is not in contact with the tilt-stop-pad (Fig 10.1). Then tighten the head-clamp-bolt to lock its position.

----- IMPORTANT NOTE -----

2) Do not over tighten Clamp. Over tightening may strip/weaken the threads of your clamps or cause damage to your truck.

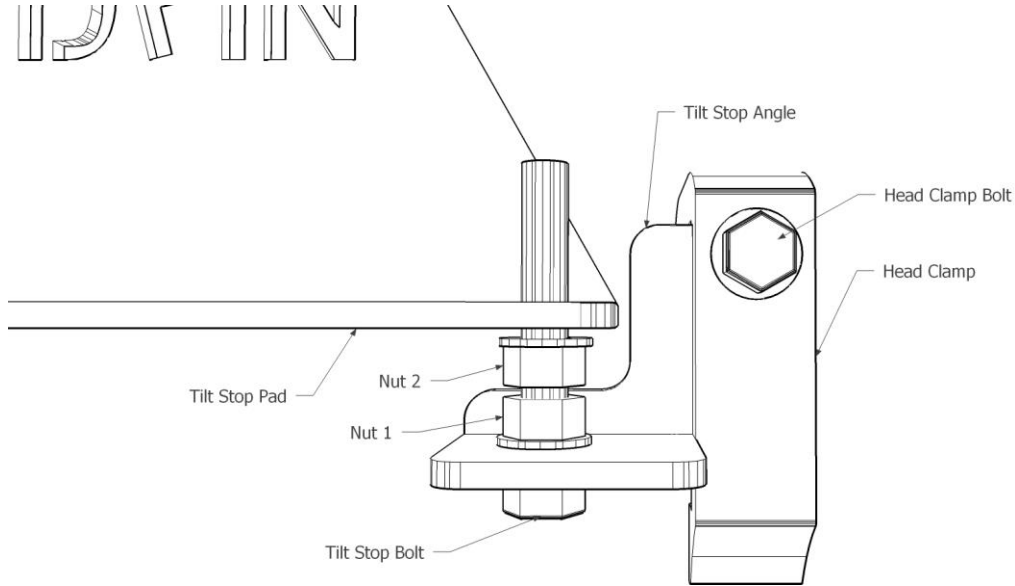


FIGURE 10.1

Step 10

Slide the tilt-stop-bolt to the position within the slot of the tilt-stop-angle so the tilt-stop-bolt is as vertical as possible (Fig 10.1). Fully tighten nut-1 clockwise to lock the position of the tilt-stop-bolt on the tilt-stop-angle.

Step 11

While gently pulling inward on the top of the driver side base-unit (10-20 pounds of pressure), turn nut-2 counterclockwise until the loose washer is positioned up against the bottom of the tilt-stop-pad (Fig 10.1). Let go of the driver side base-unit to allow it to relax. There should now be a gap between the loose washer and the underside of the tilt-stop-pad. (This process will reduce movement due to vibration by putting everything in slight tension once fully tightened.)

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 12

Place a washer on the tilt-stop-bolt and allow it to fall and rest on top of the tilt-stop-pad (Fig 11.1).

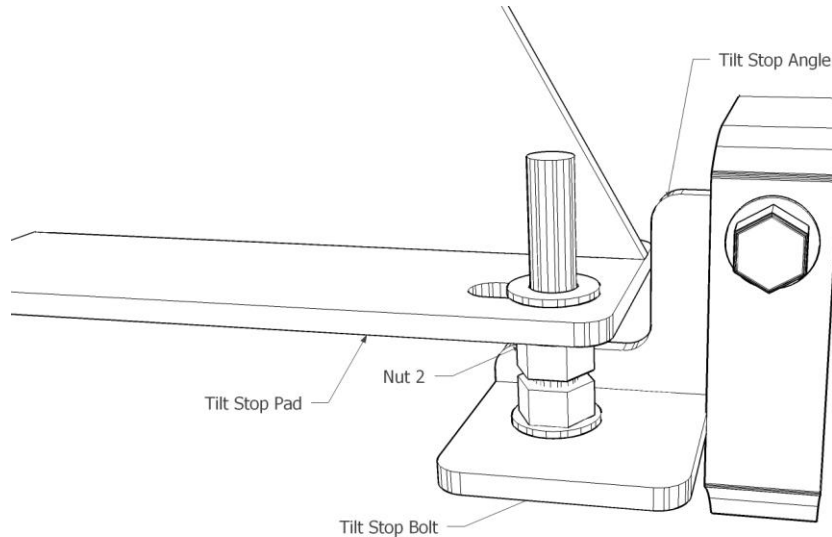


FIGURE 11.1

Step 13

Thread nut-3 on the tilt-stop-bolt and fully tighten (Fig 11.2).

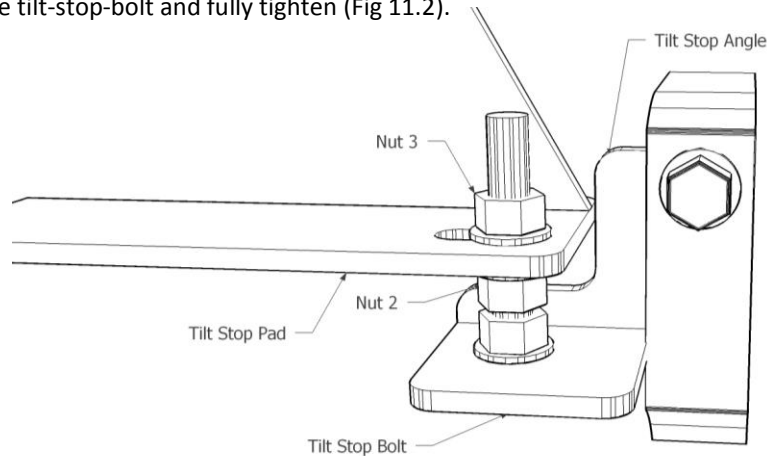


FIGURE 11.2

Step 14

Fully tighten the nut-2 against the underside of the tilt-stop-pad (Fig 11.2).

Step 15


Gently grasp the top front of the base-unit. Rapidly push and pull repeatedly for a few cycles using gentle to moderate force (10 - 20 pounds) to ensure the unit does not experience excessive movement at the top edge. Repeat at the rear end of base-unit (Fig 9.2). If excessive movement is experienced, check the clamps to ensure all are properly tightened. If this fails to correct the problem, contact Bedfin LLC for assistance.

Step 16

Repeat steps 4-15 on the passenger side of your truck.

CONGRATULATIONS ON COMPLETION OF YOUR INSTALLATION.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

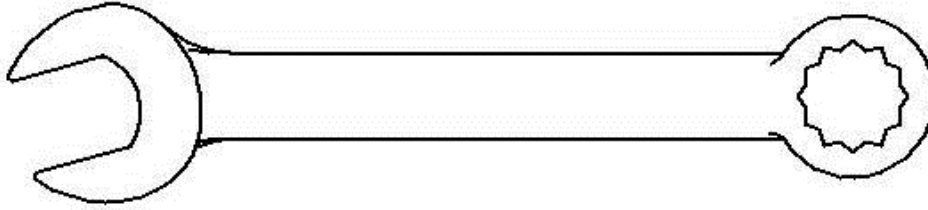


QUANTITY 2
INSTALLATION/EMERGENCY WRENCH
BF00-3021

FOR USE IN CASE OF EMERGENCY, THE UNEXPECTED NEED TO UNINSTALL BEDFIN, AND FOR ROUTINE MAINTENANCE, PLACE THE WRENCHES AND THE USER GUIDE PROVIDED IN THE VEHICLE ON WHICH THE BEDFIN UNIT IS INSTALLED. IF YOU'VE INSTALLED BEDFIN AS A SERVICE FOR ANOTHER USER MAKE THE WRENCHES AND USER GUIDE AVAILABLE TO THE USER.

ELECTRONIC COPY OF USER GUIDE IS AVAILABLE AT WWW.BEDFIN.COM

IF YOU HAVE ANY QUESTIONS OR EXPERIENCE ANY DIFFICULTY DURING INSTALLATION, CALL BEDFIN LLC FOR ASSISTANCE. (253)882-4112

Operations Guide Bedfin Series BFX

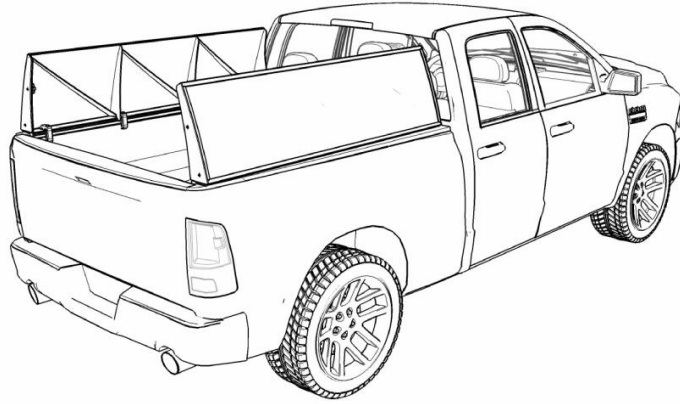

Your Bedfin unit is intended for use on suitably equipped and maintained full size pickup trucks in good operating condition while traveling at speeds below 70 miles per hour in mild to moderate weather and on smooth surfaces. Proper operation of your Bedfin unit as described in this guide is crucial to the safety and longevity of the system. Operation of Bedfin in manners inconsistent with this guide and for any purposes other than as advertised by Bedfin LLC may void warranty and may result in damage to your vehicle or other property and injury or death. If at any time your Bedfin unit seems to be malfunctioning or fails to operate as described in this guide, discontinue use and contact Bedfin LLC for assistance.

Loading a message board

Before a message-board can be loaded into the unit, the message-board-end-gate must be unlocked and disengaged from the base unit (Fig 13.1).

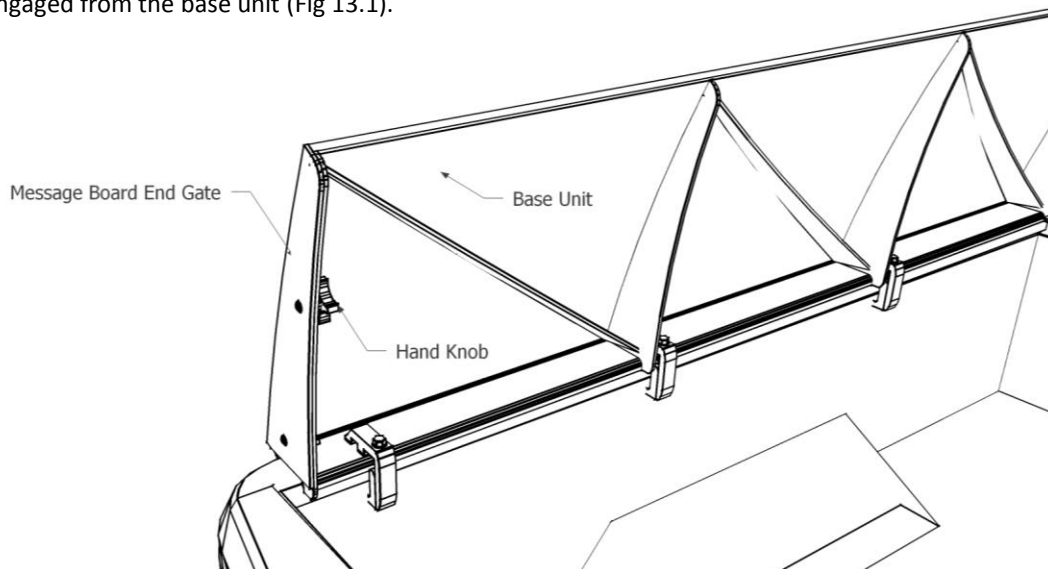


FIGURE 13.1

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 1

To unlock the message-board-end-gate, find the hand-knobs on the interior side at the rear of the base-unit, and turn the knobs counterclockwise (Fig 14.1). This will loosen the message-board-end-gate from the base-unit. Back the knobs off most of the way, but stop before they reach the end of the carriage bolt. If you back them off so far they come off of the bolt, simply place the knob back on the bolt with a clockwise turn. Be sure to replace the washer if it fell away.

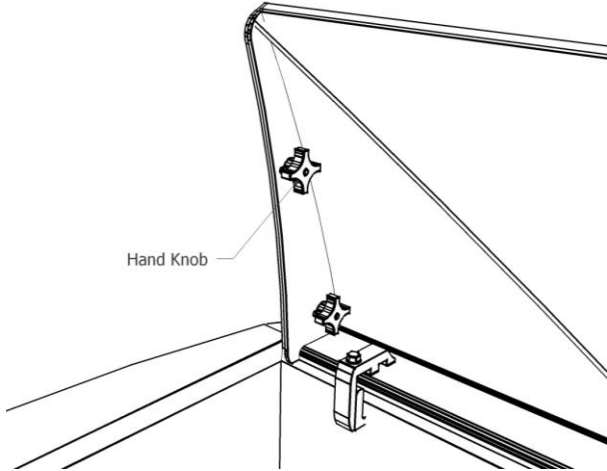


FIGURE 14.1

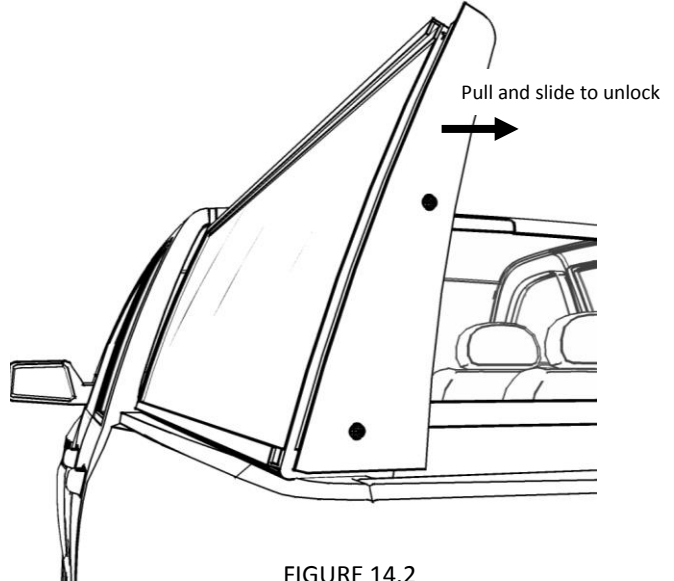


FIGURE 14.2

Step 2

To disengage the message-Board-End-Gate, gently pull the message-board-end-gate straight back and away from the base-unit. Once the message-board-end-gate is pulled back, gently slide it toward the center of the bed (Fig 14.2). If you are loading the driver side unit you will need to slide it in the direction of the passenger side and do the opposite for the passenger side. Doing this will expose the channels which restrain the message board (Fig 14.3).

Step 3

Guide the message-board into the upper and lower channels. Work slowly so as to not dent or bend your message board (Fig 14.3).

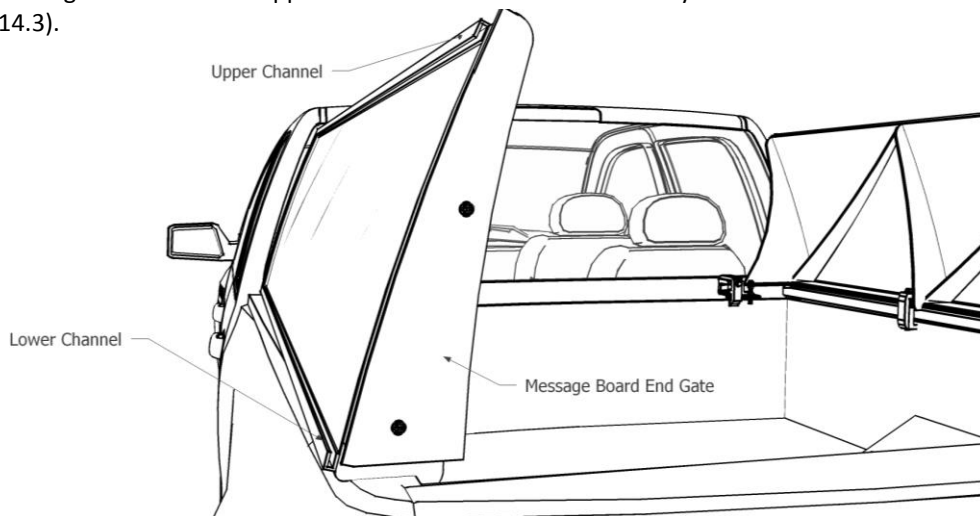


FIGURE 14.3

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 4

Once both top and bottom of the leading edge of the message-board are slid into the ends of the channel, feed the rest of the message-board forward until it stops at the front of the base-unit. The message board may fail to slide in completely due to being obstructed by the border up at the front of the base-unit. To resolve this, put some slight pressure against the message-board surface at the front using both hands. Then push message-board forward the rest of the way (approx. ½").

Step 5

Replace the message-board-end-gate to its engaged position by sliding it to the far side opposite of the direction it was slid in step 2. Then push the message-board-end-gate up against the base unit. Pinch the rear end of the message-board with the end gate by slightly sliding the message-board-end-gate back towards the center of the tailgate.

Step 6

While holding the message-board-end-gate in place with slight pressure, turn the hand knobs in a clockwise position until tight. This will lock the message-board-end-gate in place, securing the message-board. There should be no gaps between the message-board-end-gate and the end plate of the base-unit (Fig 15.1).

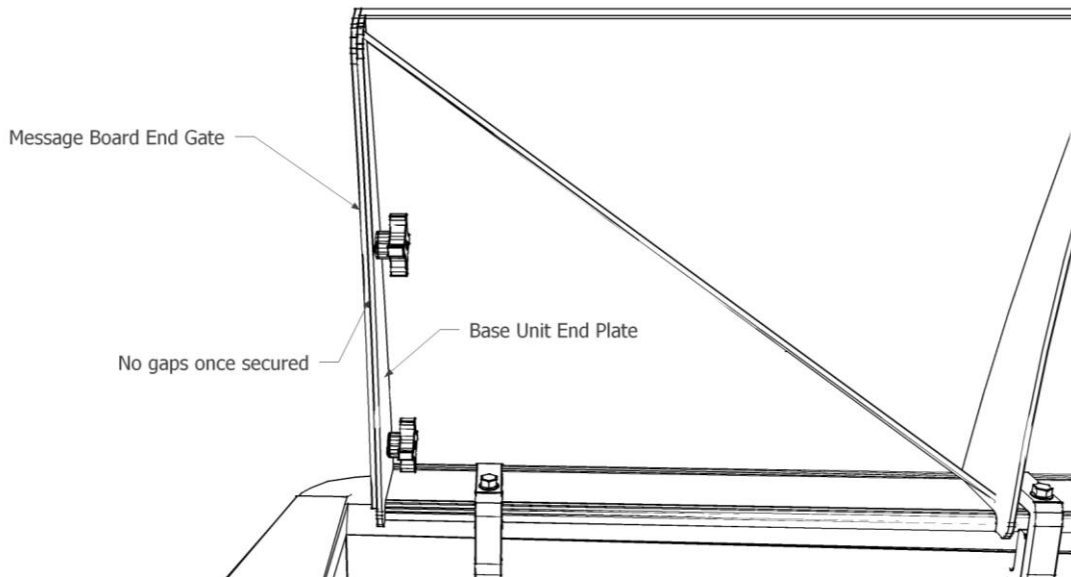


FIGURE 15.1

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Message Board Requirements

Bedfin was designed for use with 5mm thick corrugated plastic sheet, such as Whitecap by Coroplast. The printing can be provided by nearly all sign shops, however many may send the work out to a third party printer. The printed sheets should only be printed on and cut down to a board size as specified in the space below. If you are using an extension with your Bedfin unit, so that it fits a larger truck, you must add the length of the extension to the length listed below. Do not use partial sheets to add up to the full size of your unit as it will be unsecured and may become loose while the vehicle is moving. Likewise, do not use any board which is not properly sized as it may not be completely restrained by the borders of your Bedfin unit. If a message-board does become unsecured from your Bedfin unit while traveling it may cause damage to property and/or injury and death to people.

Bedfin message-board size in inches: _____ **High** X _____ **Long**
[Does not include additional length for extension]

Driving

Your Bedfin unit is designed to remain securely installed on your vehicle under normal driving conditions. Under some extreme driving conditions, your Bedfin unit may be damaged and/or your vehicle may be damaged if Bedfin is not uninstalled first. Operating with a damaged or unsecured Bedfin unit may result in damage to property and/or injury and death to people. Avoid excessively bumpy roads, or reduce speed when avoiding such roads are unavoidable. Large bumps, such as speed bumps and curbs are less problematic than small frequent bumps like washboard roads and potholes. The smaller repeated bumps can cause a frequency of vibration which over time may reduce the structural integrity of the weld joints. **A good rule of thumb is, if it's not good for your vehicle suspension, it's not good for your Bedfin unit.**

Safety checks

Routinely check for loosening of hardware before each trip. A quick check of each clamp, the message-board-end-gate and visual inspection of the overall unit will help ensure you are operating with your Bedfin safely.

To check the clamps, simply grab each clamp and with moderate force, try to wiggle them from side to side. They should not have any movement. If they do move, visually inspect them for damage and tighten the hardware if they appear to be in good working condition.

To check the head-clamp, grab the top end of the base-unit and push and pull repeatedly for a few cycles with light to moderate force. If the base-unit has considerable play or the clamp pivots back and forth, the clamp will require tightening. If tightening does not eliminate the movement, your clamp may need to be replaced or swapped for a more suitable style. Contact Bedfin LLC for assistance.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

To check the message-board-end-gate, look at the surface where the message-board-end-gate meets the base unit and look for gaps (Fig 17.1). The surfaces should not have any significant gaps. If there are gaps, then tighten the hand knobs. The hand-knobs should be checked regularly to ensure they are hand tight. Do not over tighten, as they do not require much torque to function properly. Over tightening may damage the threads and result in an unsecure message-board. Replacements knobs are available through Bedfin LLC.

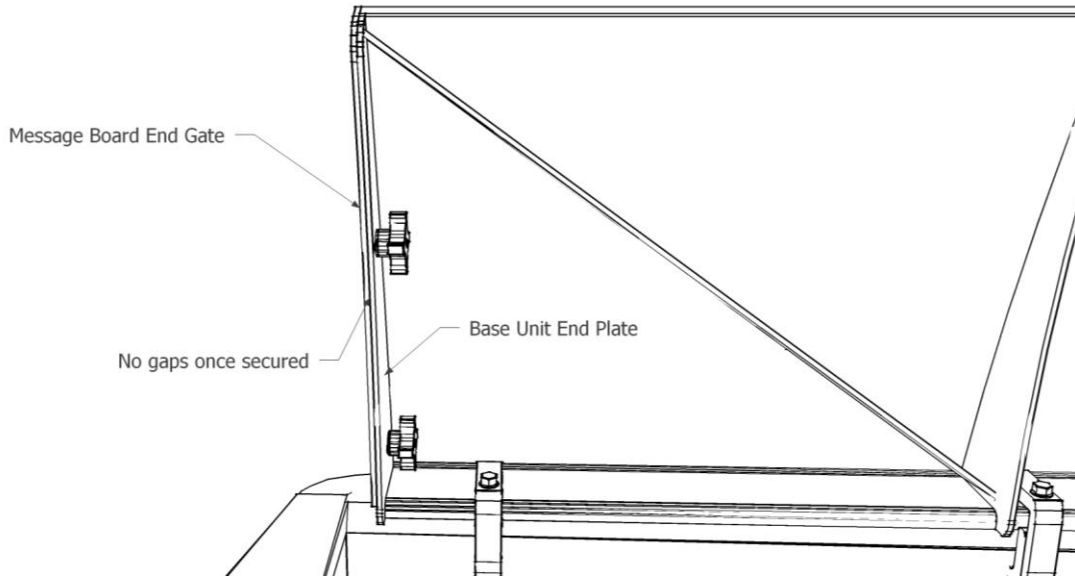


FIGURE 17.1

Cleaning

To keep your Bedfin unit looking its best and to reserve its finish, clean it regularly. The interval of cleaning will depend on the environment in which it is used. In coastal environments frequent cleaning is important to remove salt deposited from marine air. In inland environments, less frequent cleaning may be required to remove dust and road debris.

First remove the printed message-boards from the Bedfin unit. The base-unit may be left on the vehicle for cleaning, so long as the agents used are suitable for use on your vehicle. Clean the Bedfin unit using a mild soap and soft bristled brush, soft sponge, or soft terry towel. The powder coat finish is textured and can trap dirt, so small circular motions will work best. Do not use a high pressure water stream from a power washer, as it may cut into the coating and cause damage to the unit. Do not use an automated car wash, as it may damage the Bedfin unit.

Follow the supplier recommendations for cleaning your message-board. Each provider may have a different set of instructions to ensure the image is not damaged during cleaning.

Storage


When not in use, store your Bedfin unit in its original packaging or in an environment where it will not experience scratching or impact from other stored items. If storing for a long duration of time, it is recommended that all components be disassembled and packaged separately.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Installation Guide

Bedfin Extension Model BFX24

(other BFX extension models require same installation process)

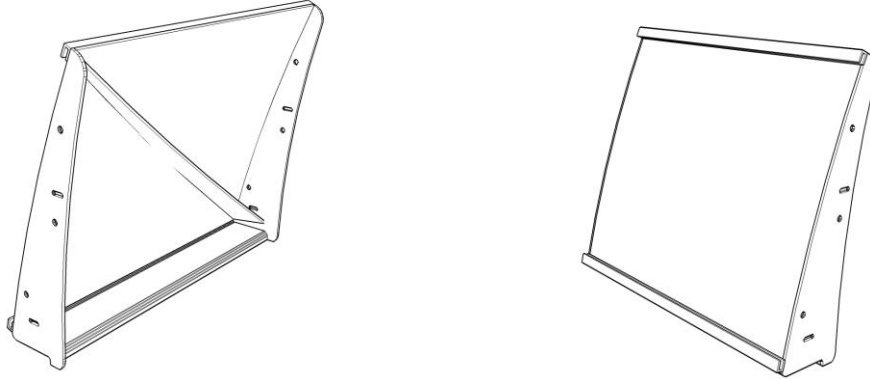

While one person alone may be able to install a unit, to help prevent strain injuries or damage to your vehicle, it is recommended to have the assistance of a second person. In each step, when maneuvering the Bedfin signage or other components around your vehicle, take extra care to avoid bumping against your vehicle; your vehicle finish and or the signage system could become damaged.

The BFX series extension is only to be used with a BFX series base unit. Only one extension should be used per each side of the truck. All parts required for installation are included with your purchase of the Bedfin extension. Prior to installation, ensure all necessary components have been included in your package. An illustrated contents list has been provided.

***** **IMPORTANT** *****

IF YOU DO NOT HAVE THE INSTALLATION/EMERGENCY UNINSTALLATION WRENCHES WHICH CAME PROVIDED WITH THE BASE UNIT, YOU WILL NEED 2 OF YOUR OWN 9/16" BOX WRENCHES OR ADJUSTABLE CRESCENT WRENCHES. IT IS RECOMMENDED TO ALWAYS HAVE A SET OF APPROPRIATE WRENCHES AVAILABLE WITH YOUR INSTALLED BEDFIN UNIT IN CASE AN ENEXPECTED UNINSTALLATION IS NECESSARY.

- ** USING POWER DRIVEN TOOLS FOR INSTALLATION IS NOT RECOMMENDED AND WILL VOID WARRANTY ****
- *** DRILLING IS NOT REQUIRED AND MODIFYING YOUR BEDFIN UNIT IN ANY WAY WILL VOID WARRANTY *****
- **** PRIOR TO INSTALLATION OR OPERATION, READ AND FOLLOW ALL MANUALS AND DOCUMENTATION******

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 1

Remove all contents from the packaging and verify the set is complete. Check for damage from transportation or manufacturer defects prior to installation. An illustrated parts list has been provided. If any parts are missing or appear damaged, discontinue installation and contact Bedfin LLC for assistance.

Step 2

With your Bedfin base-unit uninstalled from your truck and the message-board-end-gate removed (see Operations Guide), lay both the driver side base-unit and the driver side extension end to end. (Fig 19.1) The extension should be at the rear (Opposite of front end) of the base-unit so the two identical end plates are in contact with one another.

----- IMPORTANT NOTE -----

The driver side and passenger side extensions are not interchangeable. Refer to figure 19.1 and verify diagonal gussets are all aligned in the same orientation.

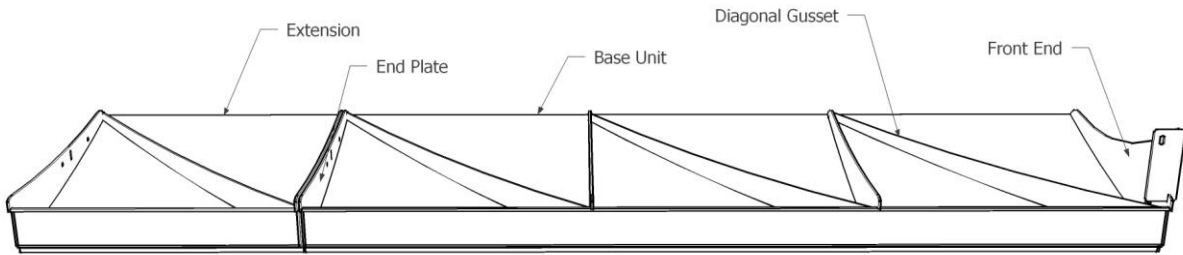


FIGURE 19.1

Step 3

Place a washer on one of the bolts provided.

Step 4

With the base unit and extension aligned, feed the bolt through any one of the round holes in the end plates connecting the extension to the base-unit (Fig 19.2).

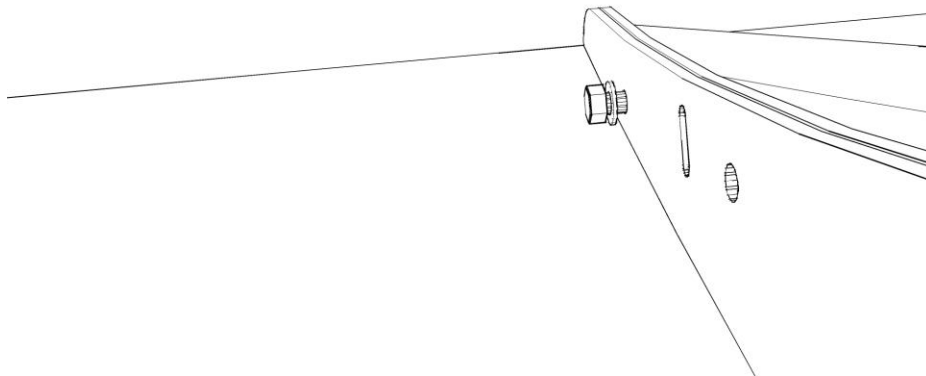


FIGURE 19.2

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Step 5

While holding the bolt in place, place a washer on the end and then loosely attach a nut (Fig 20.1). Finger-tighten only.

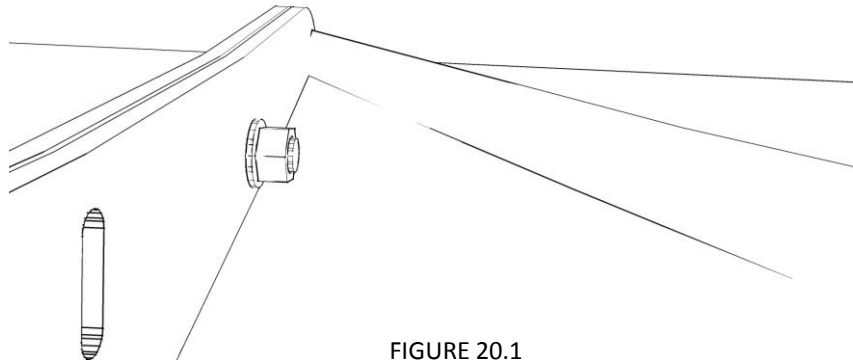


FIGURE 20.1

Step 6

Follow steps 3-5 for the two remaining round holes.

Step 7

While ensuring the base-unit and extension are perfectly aligned at the top and the bottom, loosely tighten the nuts on each bolt using a wrench at the bolt head and a wrench on the nut (Fig 20.2).

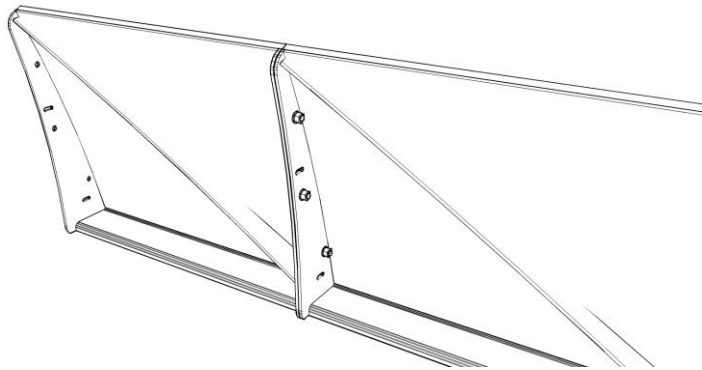


FIGURE 20.2

Step 8

Repeat step 7 using more force to fully tighten each nut.

Step 9

Repeat steps 2-8 for passenger side extension.

Step 10

Follow the installation instructions as described for BFX72 to mount the extended unit on your truck.

----- IMPORTANT NOTE -----


When placing the three standard clamps as described in step 7 of the BFX72 installation guide, place the clamp provided with your extension as close to the rear as you can without impeding the use of the hand knobs which release the message-board-end-gate. Follow the tightening instructions per the BFX72 installation guide.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Uninstallation Guide

Bedfin Model BFX72

(other BFX models require same uninstallation process)

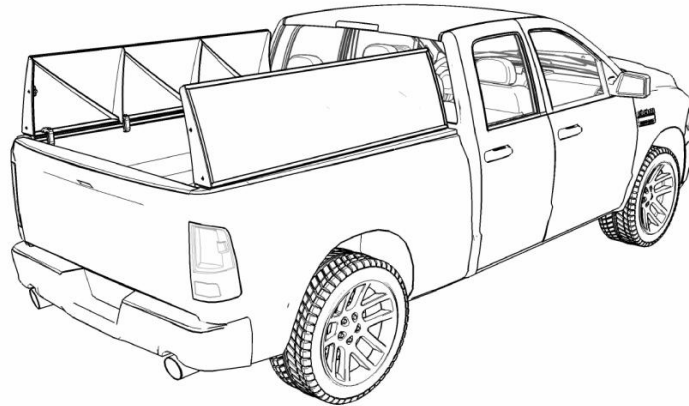

While one person may be able to uninstall a Bedfin unit, to help prevent strain injuries or damage to your vehicle, it is recommended to have the assistance of a second person. In each step, when maneuvering the Bedfin signage or other components around your vehicle, take extra care to avoid bumping against your vehicle; your vehicle finish and or the Bedfin unit could become damaged.

**** USING POWER DRIVEN TOOLS FOR UNINSTALLATION IS NOT RECOMMENDED AND WILL VOID WARRANTY ****

Step 1

Loosen and remove any two of the three clamps along the length of the bed rail. (Fig 9.2) Do not loosen the third clamp yet.

Step 2

Remove nut-3 and the washer on the head-clamp assembly (Fig 11.2)

Step 3

While assistant holds unit steady, remove the third clamp

Step 4

Lift off the base-unit

Step 5

Remove the loose washer sitting on nut-2.

Step 6

Repeat for driver side base-unit

The steps above are for temporary removal. By leaving the head-clamp in place, the reinstallation of base-unit will be faster. For complete removal, loosen the head-clamp-bolt, and remove head-clamp from head rail.

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.

Warranty

Excluding dealer purchases of Bedfin signage for the purpose of resale, Bedfin signage is covered by a non-transferable manufacturer's warranty to the original buyer for up to one (1) year from the date of purchase, to be free from defects in material and workmanship. At the sole discretion of Bedfin LLC, replacement, refund, or repair may be performed by Bedfin LLC to remedy defects which exist at the time of purchase. Damage to Bedfin signage caused by improper installation, misuse, or as a result of other forces is not covered by any warranty. The clamps provided are not covered by any warranty and replacements may be purchased separately through Bedfin LLC. Bedfin LLC may, only under written approval, authorize a repair to be made by buyer or other qualified agent at Bedfin LLC's expense and without voiding the warranty. Warranty is not transferable except by authorized Bedfin dealers for units intended for resale, or unless authorized in writing by Bedfin LLC. Bedfin LLC is not responsible for any losses or claims of damage, injury, or death resulting from the improper installation, misuse, use of a damaged or defective unit, or the use of Bedfin signage on a vehicle not suitable for Bedfin installation and use. Bedfin LLC liability for any defective unit is limited to repair, replacement, or refund of up to the purchase price of the purchased Bedfin unit. Bedfin is a product and trademark of Bedfin LLC, and as a condition of this warranty, Bedfin signage is not to be used in any way which could constitute competition or actions against the interests of Bedfin LLC. As a condition of this warranty, buyer and all others acting as his or her agents shall make no attempt to replicate any part of the Bedfin signage system or to use "Bedfin LLC", "Bedfin", "Signage Without Sacrifice" or other trademarks or promotional copy in any way without the express written permission of Bedfin LLC. As a condition of this warranty, buyer and all others acting as his or her agents shall not use Bedfin signage in any way which would be considered unlawful or in conflict with Bedfin LLC. To avoid voiding warranty, read all manuals and safety warnings prior to installation and use of Bedfin signage. Improper installation or operation will void warranty and release Bedfin LLC from all liability for damages, losses, injury, or death.

This document represents all terms of warranty, whereas supporting documents such as manuals and safety documentation exist and are available through the manufacturer at any time. No other terms, oral, written, or otherwise, are to be considered part of this warranty.

ALL CLAIMS, to be eligible for review, must be received by Bedfin LLC in writing within warranty period. Mail all claims documentation to:

Bedfin LLC
4262 S 137th Place
Tukwila, WA 98168

This guide is provided based on typical installation and requirements for vehicles which Bedfin signage was designed. Every vehicle is different in design and condition and strict attention to the vehicle limitations must be recognized and evaluated by installer and user. Bedfin accepts no liability for units improperly installed and operated or any units installed on vehicles which Bedfin signage is not suitable. Product support may be provided from Bedfin LLC by phone or in other mediums without obligating Bedfin LLC to any liability for damage, injury, or death. Comprehensive and regular inspection of Bedfin signage is the responsibility of user to ensure safe operation.